## 2. Land Use DGN Files

This chapter is provided for REFERENCE ONLY. We have provided the land use file for you so that all class participants will have the same areas.

For your own project, these exercises would have to be done prior to beginning GEOPAK drainage.

This exercise allows the user to create a Land Use file.


## 2.1 Land Use DGN Creation

The shapes created in the land use DGN file are used to specify run-off coefficients (C value) for different land use areas. These values are then used to calculate the composite run-off coefficient. This composite value is used in conjunction with rainfall data in the rational formula to calculate the Q discharge for the drainage area. This composite run-off coefficient can be manually calculated and entered as a value but by creating these shapes this can be done automatically for any drainage area specified on your project.

- a) Create a new DGN file for placement of land use shape elements from DGN seed file SEED2D.DGN and open it. Reference your proposed file, which contains proposed edges of pavement and slope lines. Also reference your survey topo file.
  - Land use.dgn

**NOTE:** For further guidance in creating a new DGN file see **Exercise 2** of the <u>MicroStation V8 Manual</u>

b) Access D & C Manager from the MicroStation menu bar drop down location Applications>GEOPAK> Road>Design & Computation Manager or from task navigation with Geopak's Civil Workflows, it is the second icon from the end on the right.

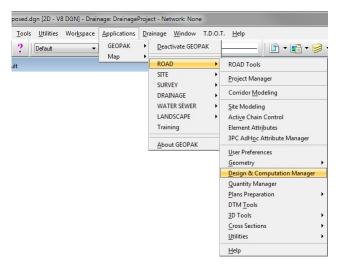



c) In D & C Manager go to the land use category under Drafting Standards\Exist. Drainage\Land Use.

There you will see the three categories of land use items used by T.D.O.T.

<u>File Edit Settings Favorites Help</u>	
ē id 🔲 💤 🖓 📼 🗲 🚻 🖀	
C:\Users\Public\Geopak Standards\tdot.ddb	^
C Drafting Standards	
Cross Sections	
Roadway Horizontal Alignments Roadway Vertical Alignments	-
Exist. Profiles	
Survey Control	
Pres. R.O.W.	
Property Lines	
Parcels	
Political Boundaries	
Prop. R.O.W.	
Prop. Easements	
C Roadway Linework	
Private Drives	
Exist. Drainage	_
Rural-Bat/Permeable	
Rural-Steep/Impermeable	

d) Open the desired category and click on the land use item you wish to define on the project. Click on **Place Influence** in the D & C Manager control strip.

	Place Influence     Adhoc Attributes     New Element Only	Match Point Tex Draw COGO Elemo		
L Design	and Computation Manager			23
File Ed	it <u>S</u> ettings F <u>a</u> vorites <u>H</u> elp			
id	🔲 🚧 🌮 💷 🐂 🕻			
Ē	Land Use Pavement-FP concrete or asp Macadem-FP asphalt macade Gravel-FP gravel roadway E Earth-FP bare earth Steep Grass-FP steep grassed a Meadow-FP turf meadows Forest-FP forested areas, Fields-FP cultivated fields Rural-Steep/Impermeable	rs or shoulders area (2:1)		
		s or shoulders		
e I	<ul> <li>Meadow-SI turf meadows</li> <li>Forest-SI forested areas,</li> <li>Fields-SI cultivated fields</li> <li>Urban</li> <li>Residential-F30 flat residentia</li> <li>Residential-F60 flat residentia</li> <li>Residential-S50 moderately s</li> <li>Commercial-S70 moderately s</li> </ul>	woods	70% impervious	Ŧ

**NOTE:** You should only use types from one section (i.e. Rural-Flat/Permeable or Urban).

e) Use any MicroStation <u>shape</u> command to draw shapes around the areas. You may wish to copy graphics from the reference files to create complex shapes. This could be the proposed edge of pavement lines from the proposed file to shape the pavement area or perhaps the edge lines from a parking lot or woods area from the survey topo file. Anytime you wish to change to a different land use type just click on it in D & C Manager. If you have shapes already defined simply use the MicroStation Change Element Attributes command to change their symbology.

## NOTES:

Shapes must be continuous and closed. Set fill type to None.

It is not necessary to place shapes to cover all areas absolutely. Any areas not delineated by a land use shape will use the **Base C value** entered in the **Drainage Area Definition** dialog.

f) Once shapes have been set up simply reference the DGN file to your proposed DGN file and they will be read when you use **Delineate Subareas** in the **Drainage Area Definition** dialog.